

[SHOP](#)[LEARN](#)[BLOG](#)[CUSTOM KITS](#)

# AD8232 Heart Rate Monitor Hookup Guide

CONTRIBUTORS:  CASEYTHEROBOT


♡ FAVORITE

14

## Introduction

The AD8232 is a neat little chip used to measure the electrical activity of the heart. This electrical activity can be charted as an ECG or Electrocardiogram. Electrocardiography is used to help diagnose various heart conditions. Now for the disclaimer:

**NOTE: This device is not intended to diagnose or treat any conditions.**

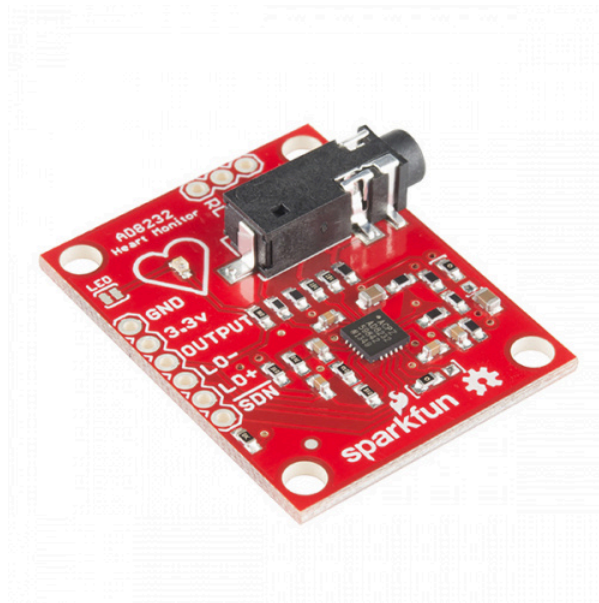

## SparkFun Single Lead Heart Rate Monitor - AD8232

● SEN-12650

**\$21.50**

★★★★☆ 22

## SparkFun 7-18-14 Product Showcase: I Heart SparkFun




### Covered in this Tutorial

In this tutorial, we will go over the basics for getting your AD8232 Heart Rate Monitor up and running. First, an overview of the board and all its features will be presented. Then, we'll show you how hook it up to your favorite microcontroller and how to create visual data using Processing.


### Suggested Reading

If you are not familiar with any of the following concepts, you may want to review them before moving ahead.




#### Serial Communication

Asynchronous serial communication concepts: packets, signal levels, baud rates, UARTs and more!




#### How to Power a Project

A tutorial to help figure out the power requirements of your project.




### Working with Wire

How to strip, crimp, and work with wire.




### What is an Arduino?

What is this 'Arduino' thing anyway? This tutorial dives into what an Arduino is and along with Arduino projects and widgets.



### Connecting Arduino to Processing

Send serial data from Arduino to Processing and back - even at the same time!




### Serial Terminal Basics

This tutorial will show you how to communicate with your serial devices using a variety of terminal emulator applications.

## Understanding the ECG

In general terms, let's look at what an ECG is representing and how we're able to sense it. The ECG is separated into two basic Intervals, the PR Interval and the QT Interval, described below.

**Note: All information comes from the Waves and Intervals section of the ECG Wikipedia page .**

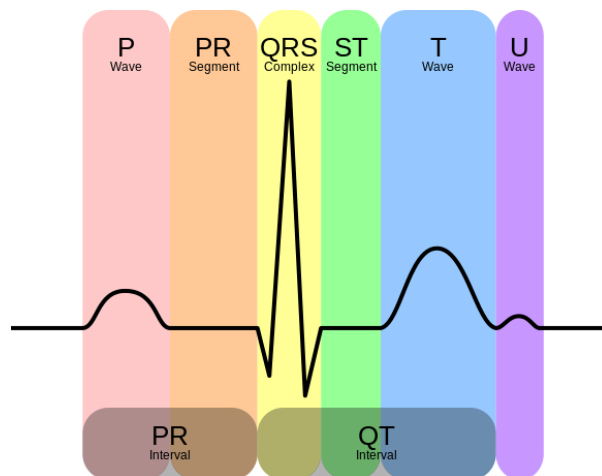

*Credit Wikipedia.org*

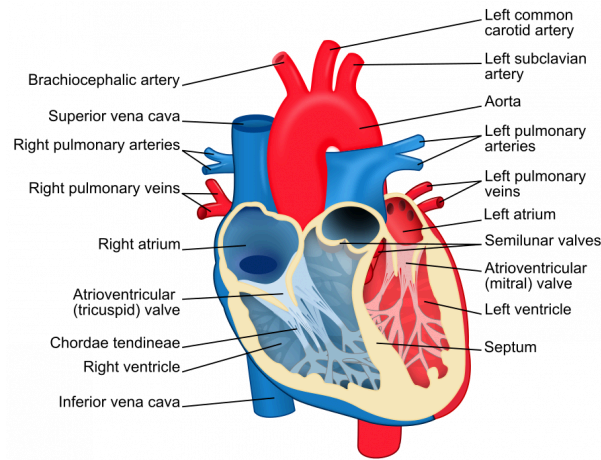



Diagram of the heart. *Credit Wikipedia.org*

## PR Interval

The PR interval is the initial wave generated by an electrical impulse traveling from the right atrium to the left. The right atrium is the first chamber to see an electrical impulse. This electrical impulse causes the chambers to "depolarize". This forces it to contract and drain deoxygenated blood from both the Superior and Inferior vena cava into the right ventricle. As the electrical impulse travels across the top of the heart it then triggers the left atrium to contract. The left atrium is responsible for receiving newly oxygenated blood from the lungs into the left ventricle via the left and right pulmonary veins. *The pulmonary veins are red in the diagram because they are carrying oxygenated blood. They are still called veins because veins carry blood towards the heart. Science!*

## QT Interval

The QT Interval is where things get really interesting. The QRS is a complex process that generates the signature "beep" in cardiac monitors. During QRS both ventricles begin to pump. The right ventricle begins to pump deoxygenated blood into the lungs through the left and right pulmonary arteries. *The pulmonary arteries are blue in the diagram because they are carrying deoxygenated blood. They are still called arteries because arteries carry blood away the heart. Science, Again!* The left ventricle is also beginning to pump freshly oxygenated blood through the aorta and into the rest of the body. After the initial contraction comes the ST segment. The ST segment is fairly quiet electrically as it is the time where the ventricles waiting to be "re-polarized". Finally the T wave becomes present to actively "re-polarize", or relax the ventricles. This relaxation phase resets the ventricles to be filled again by the atriums.

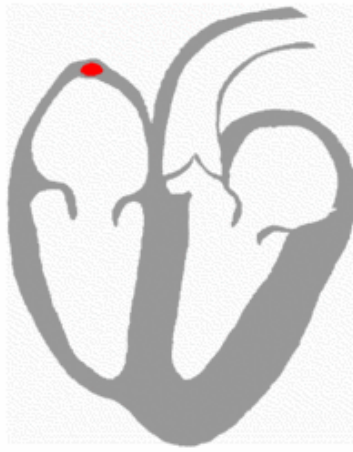

Heartbeat with corresponding ECG *Credit Wikipedia.org*

## Connecting the Hardware

In this guide, we'll connect the AD8232 Breakout to an Arduino microcontroller. We will build a simple cardiac monitor that will allow you to measure the electrical activity of the heart in real time!

### Required Materials

#### AD8232 Heart Rate Monitor Example [SparkFun Wish List](#)



##### SparkFun USB Mini-B Cable - 6 Foot

CAB-11301

This is a USB 2.0 type A to Mini-B 5-pin cable. You know, the mini-B connector that usually comes with USB...



##### SparkFun FTDI Basic Breakout - 3.3V

DEV-09873

This is the newest revision of our [FTDI Basic](http://www.sparkfun.com/commerce/product\_info.php?produ...



##### Jumper Wire Kit - 140pcs

PRT-00124

This is a time saving kit of jumper wires - cut, stripped, and pre-bent for your prototyping pleasure. Included ...



##### Break Away Headers - Straight

PRT-00116

A row of headers - break to fit. 40 pins that can be cut to any size. Used with custom PCBs or general custo...



##### Breadboard - Self-Adhesive (White)

PRT-12002

This is your tried and true white solderless breadboard. It has 2 power buses, 10 columns, and 30 rows - a t...



##### Arduino Pro Mini 328 - 3.3V/8MHz


DEV-11114

It's blue! It's thin! It's the Arduino Pro Mini! SparkFun's minimal design approach to Arduino. This is a 3.3V Ar...

	<b>Sensor Cable - Electrode Pads (3 connector)</b> CAB-12970 This is your simple three conductor sensor cable with electrode pad leads. These cables are 24" long and fe...
	<b>Disposable Surface EMG/ECG/EKG Electrode - 24mm (10 pack)</b> SEN-12969 This is a 10 pack of Biomedical Sensor Pads, disposable electrodes that can be used to measure EEG, EC...
	<b>SparkFun Single Lead Heart Rate Monitor - AD8232</b> SEN-12650 The AD8232 SparkFun Single Lead Heart Rate Monitor is a cost-effective board used to measure the electri...

Pin Connections

The AD8232 Heart Rate Monitor breaks out nine connections from the IC. We traditionally call these connections "pins" because they come from the pins on the IC, but they are actually holes that you can solder wires or header pins to.

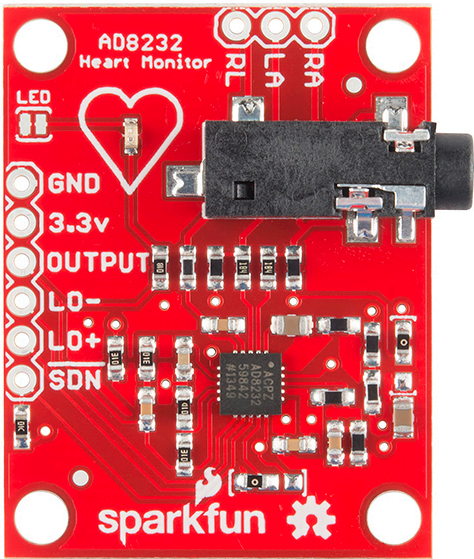


We'll connect five of the nine pins on the board to your Arduino. The five pins you need are labeled **GND**, **3.3v**, **OUTPUT**, **LO-**, and **LO+**.

Board Label	Pin Function	Arduino Connection
<b>GND</b>	Ground	<b>GND</b>
<b>3.3v</b>	3.3v Power Supply	<b>3.3v</b>
<b>OUTPUT</b>	Output Signal	<b>A0</b>
<b>LO-</b>	Leads-off Detect -	<b>11</b>
<b>LO+</b>	Leads-off Detect +	<b>10</b>
<b>SDN</b>	Shutdown	<b>Not used</b>

Connecting Headers to the Board


You can use any method you'd like to make your connections to the board. For this example, we'll solder on a five-pin length of male-male header strip and use a breadboard and jumpers to make our connections.

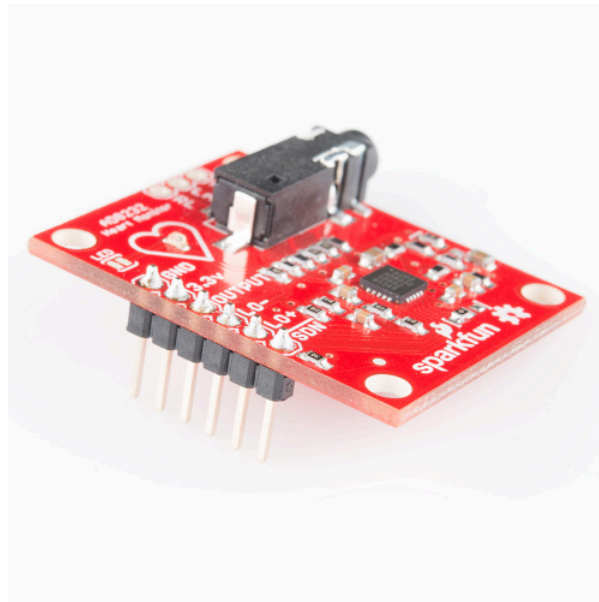

*Headers installed*

## Circuit Diagram


Follow the diagram below, to make necessary connections. The SDN pin is not used in this demo. Connecting this pin to ground or "LOW" on a digital pin will power down the chip. This is useful for low power applications.

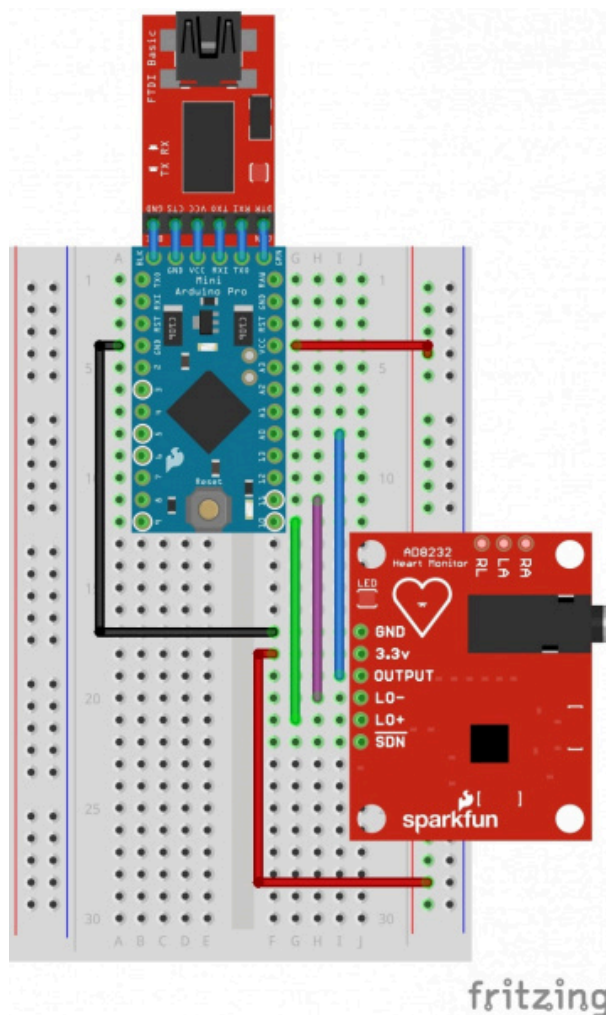

*Connection Diagram*

## Sensor Pad Placement


Now that the electronics are complete, let's look at sensor pad placement. It is recommended to snap the sensor pads on the leads before application to the body.

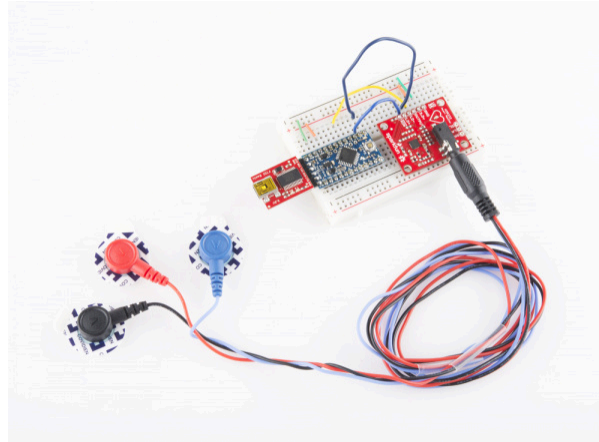

*Sensors Connected to Heart Monitor*

The closer to the heart the pads are, the better the measurement. The cables are color coded to help identify proper placement as shown in the table based on Einthoven's triangle. The sensors can be placed on the forearms and leg as shown on the diagram on the left. Or they can be placed on the chest near the arms and above the right, lower abdomen (i.e. just above the right hip) as shown on the diagram on the right.

Cable Color	Signal
<b>Black</b>	RA (Right Arm)
<b>Blue</b>	LA (Left Arm)
<b>Red</b>	RL (Right Leg)

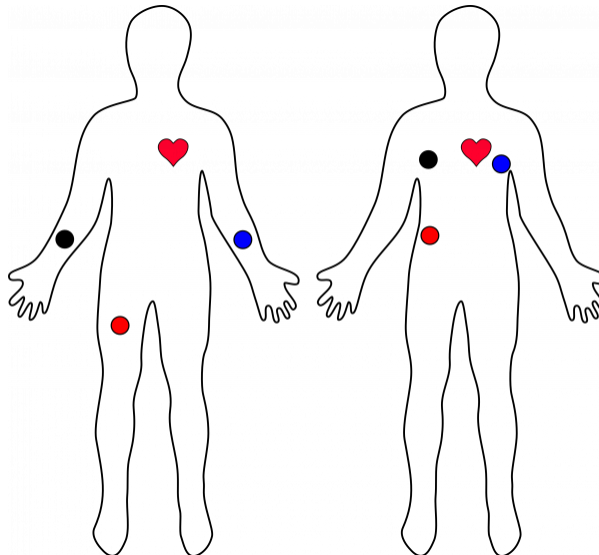

*Typical Sensor Placements*

## Arduino Example

**Note:** This code has been written and tested on Arduino IDE version v1.0.5. Otherwise, make sure you are using the latest stable version of the Arduino IDE on your desktop. If this is your first time using Arduino,



please review our tutorial on installing the Arduino IDE. Also, make sure to check out the following tutorials before uploading code: [How to Install FTDI Drivers](#) and [Using the Arduino Pro Mini 3.3V](#).

By this point, you should have the hardware connected and ready. The example sketch can be found in the GitHub repository.


**GITHUB: AD8232 HEART RATE MONITOR/.../HEART\_RATE\_DISPLAY\_ARDUINO.INO**

You can cut and paste the code straight from GitHub or clone the repository and open the file. Make sure to select the correct board (i.e. **Arduino Pro Mini 3.3V/8MHz**) and COM port. When you are ready, hit the upload button to upload the code to your board.



*Upload Sketch to Arduino Pro Mini 3.3V/8MHz*

To verify that the heart rate monitor is working as expected, open the serial monitor at **9600 baud**. You should see values printed on the screen. Below is an example output with the sensors connected on the forearms and right leg. Your serial output should spike between +300/-200 around the center value of about ~500.

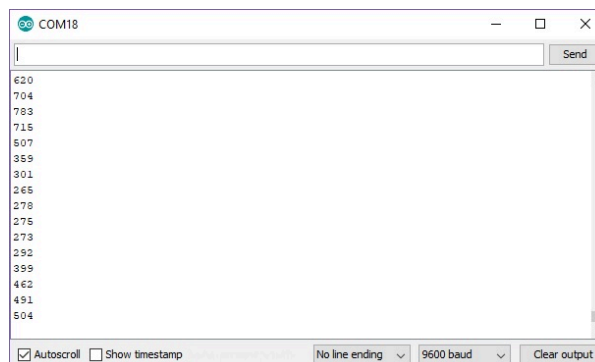

The serial data is hard to visualize if you are just viewing the values. If you are using Arduino IDE v1.6.6+, there is an option to view the data on a graph using the Arduino Serial Plotter as one option. In the Arduino IDE, select **Tools > Serial Plotter**. You should see a waveform similar to the image below when the sensors are placed correctly and not moving.



## Processing Example

**Heads Up!** This Processing Sketch is for advanced users! For those that are new to programming, you may just want to use the Arduino Serial Plotter. For those that have experience programming and have used Processing before, feel free to continue on!

**Note:** Processing is a software that enables visual representation of data, among other things. If you've never dealt with Processing before, we recommend you also check out the Arduino to Processing tutorial. Follow the button below to go ahead and download and install Processing IDE v2.2.1. The following examples were intended for Processing IDE v2 so you may have issues getting it running on Processing IDE v3.

**DOWNLOAD PROCESSING IDE 2.2.1**

The Processing example code will give you another option to visualize the output of what's going on. The example processing sketch can be found in the GitHub repository as well.


**GITHUB: AD8232 HEART RATE MONITOR/.../HEART\_RATE\_DISPLAY.PDE**

The example Processing sketch works with the **Processing IDE v2.2.1**. Later versions may not work with the example code so makes sure to download the stable release for v2.2.1 from the Processing IDE Download page. When ready, press the **"Run"** button.



### Run the Processing sketch

The Processing sketch will probably not work at first and you will probably see nothing drawn.

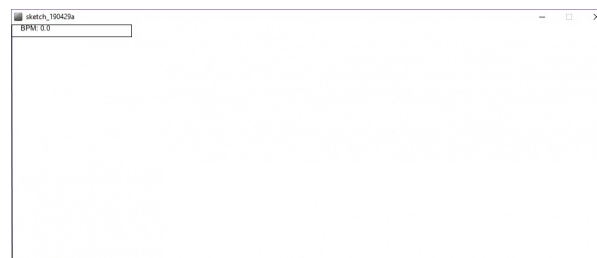


If you see nothing displayed, it is probably because the Processing sketch is not reading the correct COM port. Make sure to modify the following line of code if this happens.

```
myPort = new Serial(this, Serial.list()[2], 9600);
```


You will need to change the parameter inside `Serial.list()[N]` based on the enumerated COM ports on your computer. A list of available COM ports will appear in the lower portion of the sketch window. Remember that COM port selection begins at 0 so you would be counting each COM port from 0 (in terms of programming not in mathematical terms) from left to right. In this case, the Arduino enumerated as COM38 when uploading so it should be in the 3rd element in the array. Therefore, you would change the value to **2**. As a result, the example code would be listed as `Serial.list()[2]`. Typically your Arduino will appear as the highest COM number if it is the only device connected to your computer.

## Available COM Ports

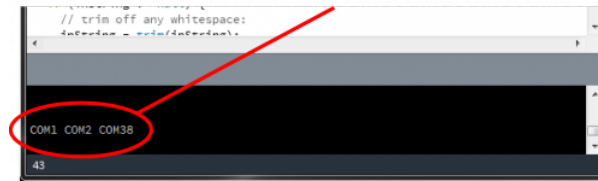


The Arduino shows up as COM38. This is found in the Serial List at array element "2".

Once the COM port is adjusted with your setup, hit the **Run** button again. If everything is working correctly, you should see a nice box pop up and start displaying the output signal similar to the image below.

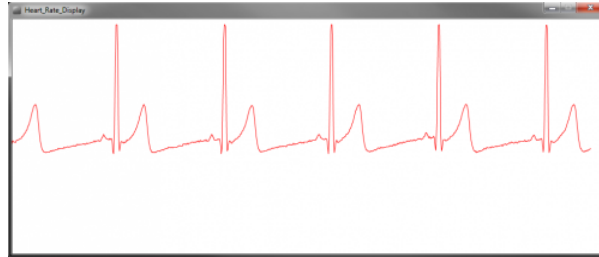

*"Normal" heart rate of an SFE engineer*

If your subject decides to remove the sensors, the leads off detection in the code will kick in and display a flat blue line.

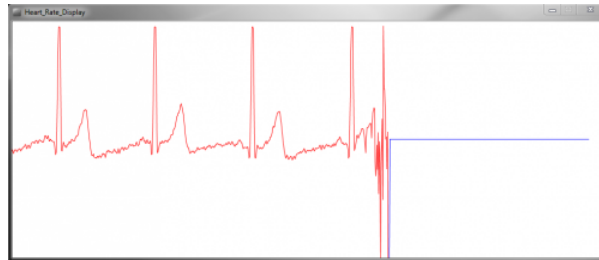


*"Flight, we just lost Lovell!"*

## Troubleshooting and Tips & Tricks

ECG's are notoriously noisy. This is because you are measuring muscle activation. The further the sensor pads are from the heart, the more muscle noise you will see. These are commonly referred to as **"Motion Artifacts"**. So here are some simple tips to improve the signal quality.

- Keep sensor pads as close to the heart as you can.
- Make sure the RA and LA sensor pads are on correct sides of the heart.
- Try not to move too much while taking a measurement.
- Try to use fresh pads for each measurement. The pads lose the ability to pass signals with multiple applications.
- Prep and clean the area you plan to stick pads. This will help make a good connection (hair is not a good conductor).
- You may have to adjust sensor placement for different individuals.


If the sensor pads are not placed correctly on the body or the cable is not connected, you may see an output similar to the image below in the serial monitor. The values will either clip the waveform between 0 and 1023 or display an "!".

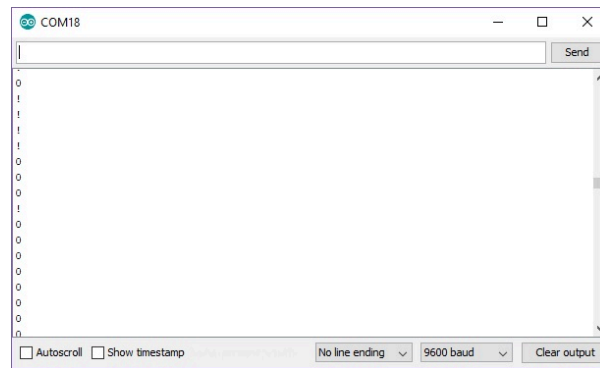

As a result, you will either see a flat line in the Arduino serial plotter or nothing will be drawn in the Processing's display window. If this happens, you'll need to check your solder joints and try placing the sensor pads to a different location around the body.



*Arduino Serial Plotter  
Displaying Flat Line*

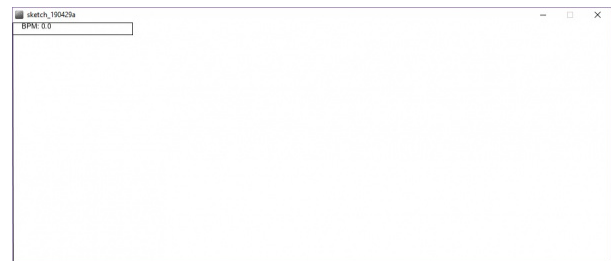

*Processing Sketch  
Displaying Nothing*

If you happen to moving a lot or flex your muscle, you will not get a distinct waveform. Make sure to remain still and relax as the sensor is taking measurements. You may see a few distinct waveforms but it will not be as reliable.




*Arduino Serial Plotter  
Displaying a Noisy Waveform*




*Processing Sketch  
Displaying a Noisy Waveform*

Depending on where the sensor pads are placed, you may still get a distinct waveform similar to the graphs displayed in the Arduino serial plotter below. You may notice the QT interval pulsing even though the center value is noisy. This is not as desirable as the waveforms shown earlier and the pads may need to be moved to a different location depending on your application. When inspecting the graph on the right further, you'll notice that there is a gradual spike at the end of the waveform. This was due to the sensor picking up movements from a user breathing deeply similar to when a user is moving a lot or flexing a muscle. If this happens, make sure to not force the breathing.

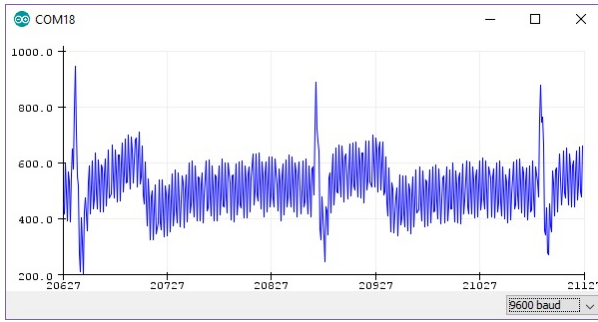

*Arduino Serial Plotter  
Displaying a Noisy Waveform with Distinct QT  
Intervals*

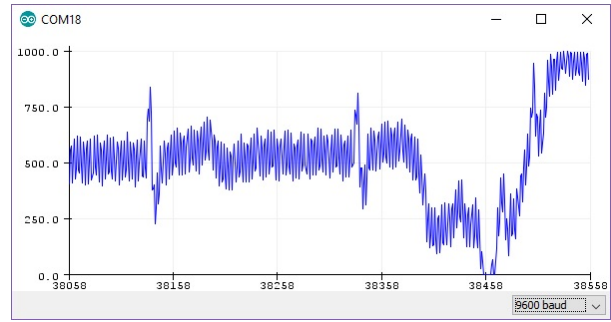


*Arduino Serial Plotter  
Displaying a Noisy Waveform with Distinct QT Intervals  
and Motion Artifacts*

## Resources and Going Further

Thanks for reading. For more resources on the AD8232 Heart Rate Monitor, check out the following links:


- [AD8232 Datasheet](#)
- [AD8232 GitHub Repository](#)
- [SFE Product Showcase](#)

For more Electronics Fun, check out these other SparkFun tutorials:




### Hackers in Residence - Hacking MindWave Mobile

Review, teardown, and hacking tutorial for the MindWave Mobile, a \$99 commercial grade EEG sensor.




### SparkFun gator:particle Hookup Guide

The gator:particle is an I2C heart-rate monitor and pulse oximeter that can be used as a particle sensor. This tutorial will get you started using the gator:particle with the micro:bit platform.



## SparkFun Pulse Oximeter and Heart Rate Monitor Hookup Guide

Find out your oxygen saturation level or check out your heart rate using the MAX30101 biometric sensor and MAX32664 Biometric Hub via I2C!



## Getting Started with the MyoWare® 2.0 Muscle Sensor Ecosystem

The MyoWare® 2.0 Muscle Sensor, an Arduino-compatible, all-in-one electromyography (EMG) sensor from Advancer Technologies. In this tutorial, we will go over the features and related shields to connect the sensor to a muscle group.

More Biometric products offered by SparkFun:



### MyoWare 2.0 Muscle Sensor

DEV-21265

**\$39.95**

★★★★☆ 3



### MyoWare 2.0 Muscle Sensor Development Kit

KIT-21269

**\$149.95**

★★★★☆ 2



### Fingerprint Scanner - TTL (GT-521F52)

SEN-14585

★★★★☆ 4



### SparkFun Pulse Oximeter and Heart Rate Sensor - MAX30101 & MAX32664 (Qwiic)

SEN-15219

**\$42.95**

★★★★☆ 8